

Instruction of watch bell:

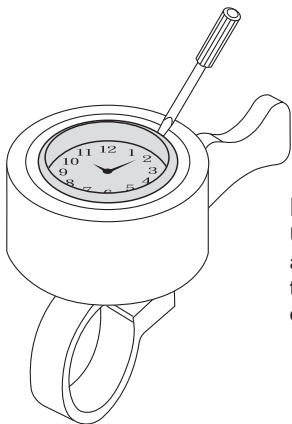


Figure 1.

Use “-” screwdriver and work gently to get the watch out of the bell.



Figure 2.

Adjust time by turning the nut.

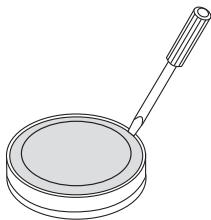


Figure 3.

Upside down the watch use “-” screwdriver to take off the shell and change battery when necessary.

Battery: 1pc SR626SW(1.55V) required